brother®

Home Sewing Machine
PARTS REFERENCE LIST

MODEL: HS2000/SM360E/SM340E
MS4/MS4NT/MS5/MS5NT
MS6/MS6NT
JS40E/JS60E

CONFIDENTIAL

Copyright © 2010 Brother Industries, Ltd.
All rights reserved.

Published: Mar.,2008
Revised: Nov.,2010

CONTENTS

(1) MAIN FRAME / COVER 2

(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT 4

(3) FEED UNIT 6

(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM 8

(5) ELECTRIC PARTS / MAIN MOTOR UNIT 10

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE 12

Note on parts:
We keep performance parts for this sewing machine for at least 8 years after this model is discontinued.
Performance parts are the necessary parts to maintain the function of the sewing machine.

(1) MAIN FRAME / COVER

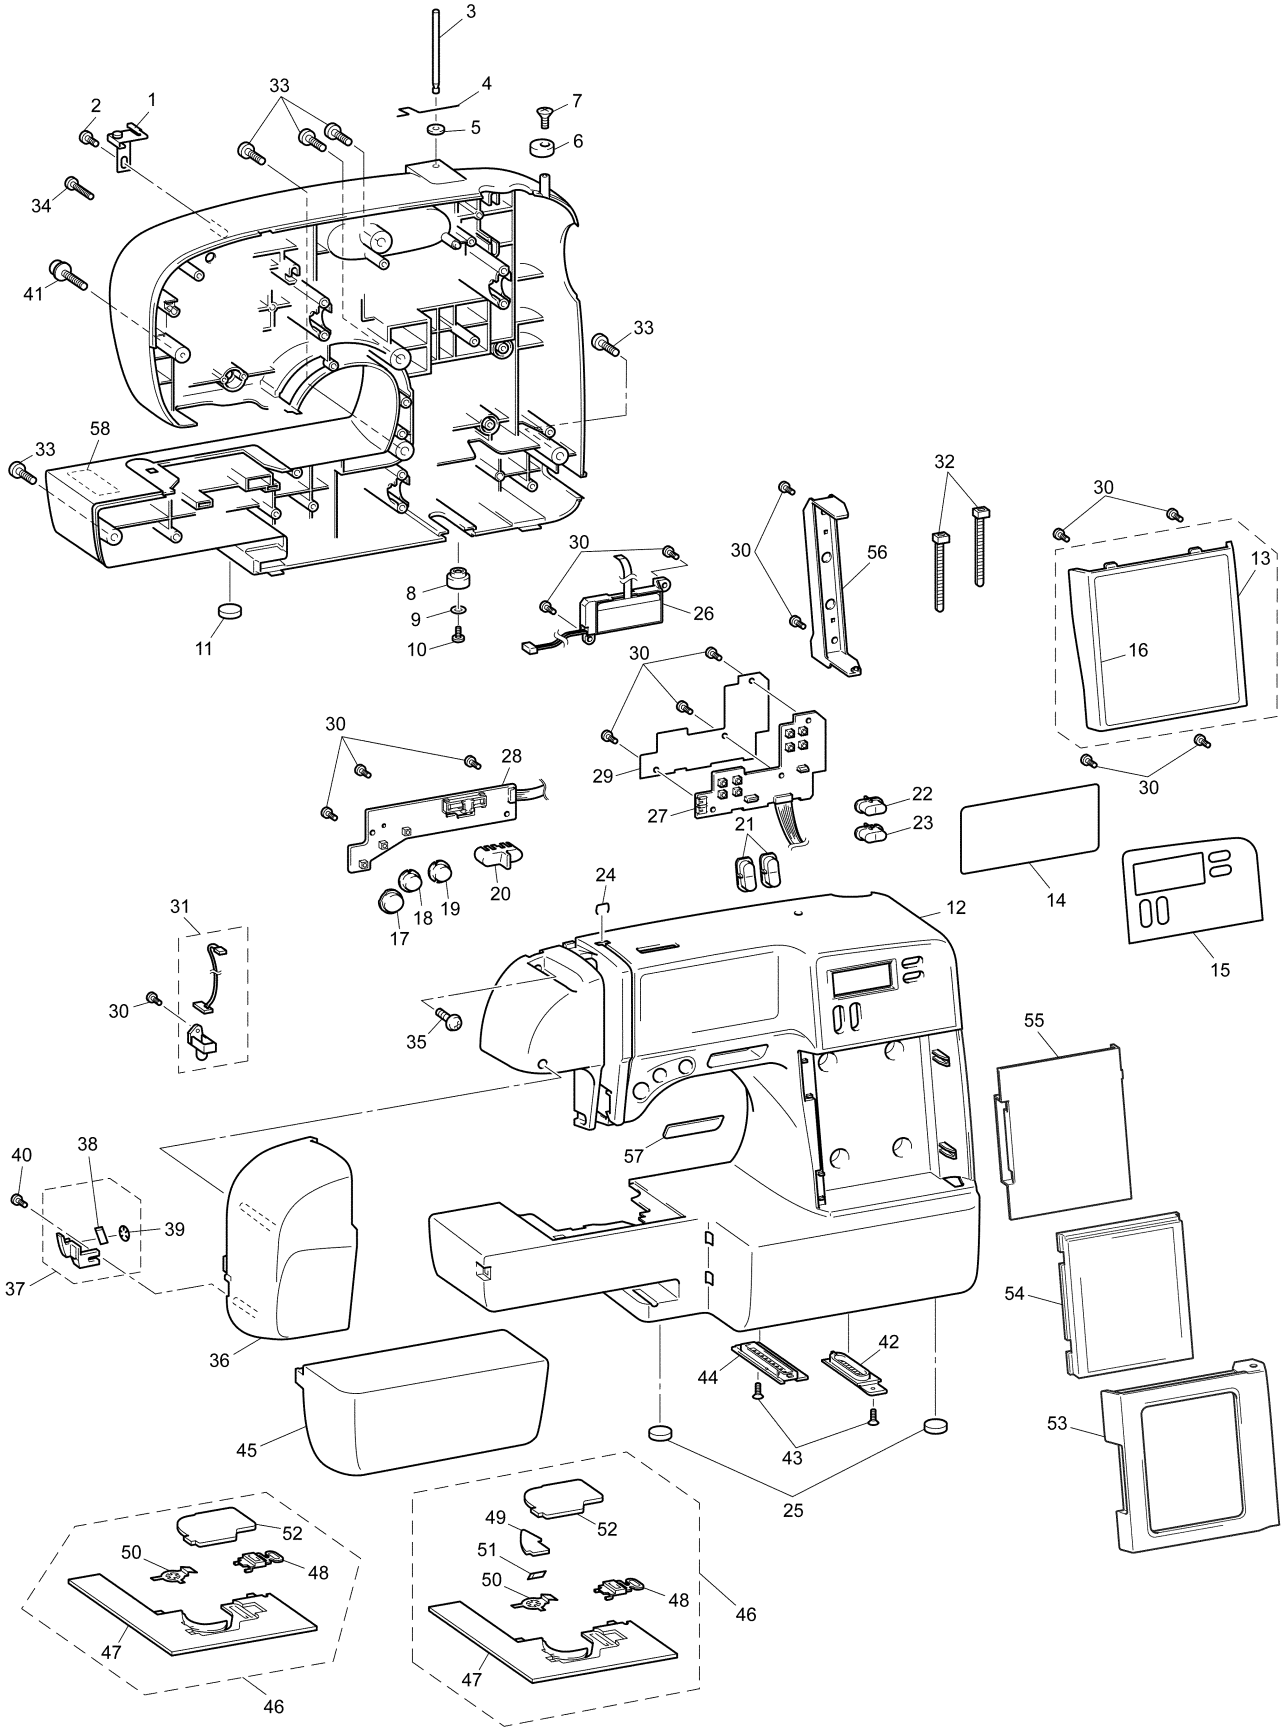

(1) MAIN FRAME / COVER

No.	CODE	NAME	REMARKS
1	XC4846021	THREAD GUIDE ASSY	
2	XC3588021	GIZA TITE 4X12	
3	XC8701021	SPOOL PIN	
4	XA0628121	SPOOL PIN SPRING	
5	XA8851021	SPOOL PIN STAND	
6	XE8912001	BOBBIN PRESSER	1000020011
7	XZ5031001	TAPTITE PAN P (S/P W) 3X12	
8	138337022	RUBBER CUSHION A	
9	026350235	WASHER PLAIN M 3.5	
10	083361216	TAPTITE PAN B M3.5X12	
11	XC4077021	BASE PLATE RUBBER	
12	XE3663101	FRONT COVER (OTHER)	1000012397
	XE5502001	FRONT COVER (MS4, MS5, SM340E, MS4NT, JS40E)	1000010191
13	XE3495001	PANEL COVER (EXCEPT: MS4, 5, 6)	
14	XE9398001	DECORATION PLATE A (HS2000: H0G150645~)	1000020640
	XE3665001	DECORATION PLATE A (HS2000: ~H0G150644)	1000022454
	XE5509001	DECORATION PLATE A (SM360E)	1000009607
	XE3665004	DECORATION PLATE A (MS6, MS6NT)	1000011362
	XE3665002	DECORATION PLATE A (MS4, MS4NT)	1000011362
	XE5506001	DECORATION PLATE A (SM340E)	1000009694
	XE3665003	DECORATION PLATE A (MS5)	1000011362
	XE7812001	DECORATION PLATE A (JS40E)	1000016962
	XE7819001	DECORATION PLATE A (JS60E)	1000016964
15	XE3666001	DECORATION PLATE B (HS2000)	
	XE5510001	DECORATION PLATE B (SM360E)	1000009607
	XE5716001	DECORATION PLATE B (MS6, MS6NT)	1000010193
	XE5689001	DECORATION PLATE B (MS4, MS4NT)	1000010191
	XE5507001	DECORATION PLATE B (SM340E)	1000009694
	XE5710001	DECORATION PLATE B (MS5)	1000010191
	XE7813001	DECORATION PLATE B (JS40E)	1000016962
	XE7820001	DECORATION PLATE B (JS60E)	1000016964
16	XE3667001	DECORATION PLATE C (HS2000)	
	XE5511001	DECORATION PLATE C (SM360E)	1000009607
	XE5508001	DECORATION PLATE C (SM340E)	1000009694
	XE7814001	DECORATION PLATE C (JS40E)	1000016962
	XE7821001	DECORATION PLATE C (JS60E)	1000016964
17	XE3664001	SS BUTTON (EXCEPT: MS4, 5, SM340E, MS4NT, JS40E)	
18	XE3497001	BACKSTITCHING BUTTON	
19	XE3498001	NP BUTTON (EXCEPT: MS4, 5, SM340E, MS4NT, JS40E)	
20	XE3499001	SV KEYTOP (EXCEPT: MS4, 5, SM340E, MS4NT, JS40E)	
21	XE3500001	SELECTING BUTTON	
22	XE3501001	MANUAL BUTTON A	
23	XE3502001	MANUAL BUTTON B	
24	X53625121	UPPER COVER THREAD GUIDE	
25	XC4077021	BASE PLATE RUBBER	
26	XE2336001	SINGLE LIGHT GUIDE ASSY: M1YM	
27	XE4552001	OPERATION PCB SUPPLY ASSY	
28	XC9834021	SSVR PCB SUPPLY ASSY	
29	XE3638001	INSULATOR SHEET: LCP OP	
30	085311015	TAPTITE BIND B M3X10	
31	XE4553001	LED LAMP SUPPLY ASSY	
32	X53169020	BAND	
33	XZ5049001	GIZA TITE (S/P W) 5X18	
34	XE2261001	GIZA TITE (S/PW) 4X25	
35	XC3588021	GIZA TITE 4X12	
36	XE3504001	FACE PLATE C	
37	XC4855021	CUTTER COVER ASSY	
38	X80321021	NT LOWER THREAD CUTTER	
39	138384021	RETAINING RING, CS5	
40	085311216	TAPTITE BIND B M3X12	1000012933
41	XA3337022	TAPTITE, CUP P M4X20	
42	XE3505001	BASE COVER	
43	084310815	TAPTITE FLAT B M3X8	
44	XC8729021	BASE COVER A	
45	XE3506001	ACCESSORY TABLE C	
46	XC3520221	NEEDLE PLATE B ASSY (HS2000, SM340E, SM360E, MS4NT, MS5NT, MS6NT, JS40E, JS60E)	1000017831
	XC4859121	NEEDLE PLATE B ASSY (MS4, 5, 6)	
47	XC3521221	NEEDLE PLATE B (HS2000, SM340E, SM360E, MS4NT, MS5NT, MS6NT, JS40E, JS60E)	1000017831
	XC4860121	NEEDLE PLATE B (MS4, 5, 6)	
48	XC7371021	SLIDE BUTTON	
49	XC2367021	CUTTER COVER (HS2000, SM340E, SM360E, MS4NT, MS5NT, MS6NT, JS40E, JS60E)	1000017831
50	XC2368021	SPRING PLATE	
51	X80321021	NT LOWER THREAD CUTTER (HS2000, SM340E, SM360E, MS4NT, MS5NT, MS6NT, JS40E, JS60E)	1000017831

(1) MAIN FRAME / COVER

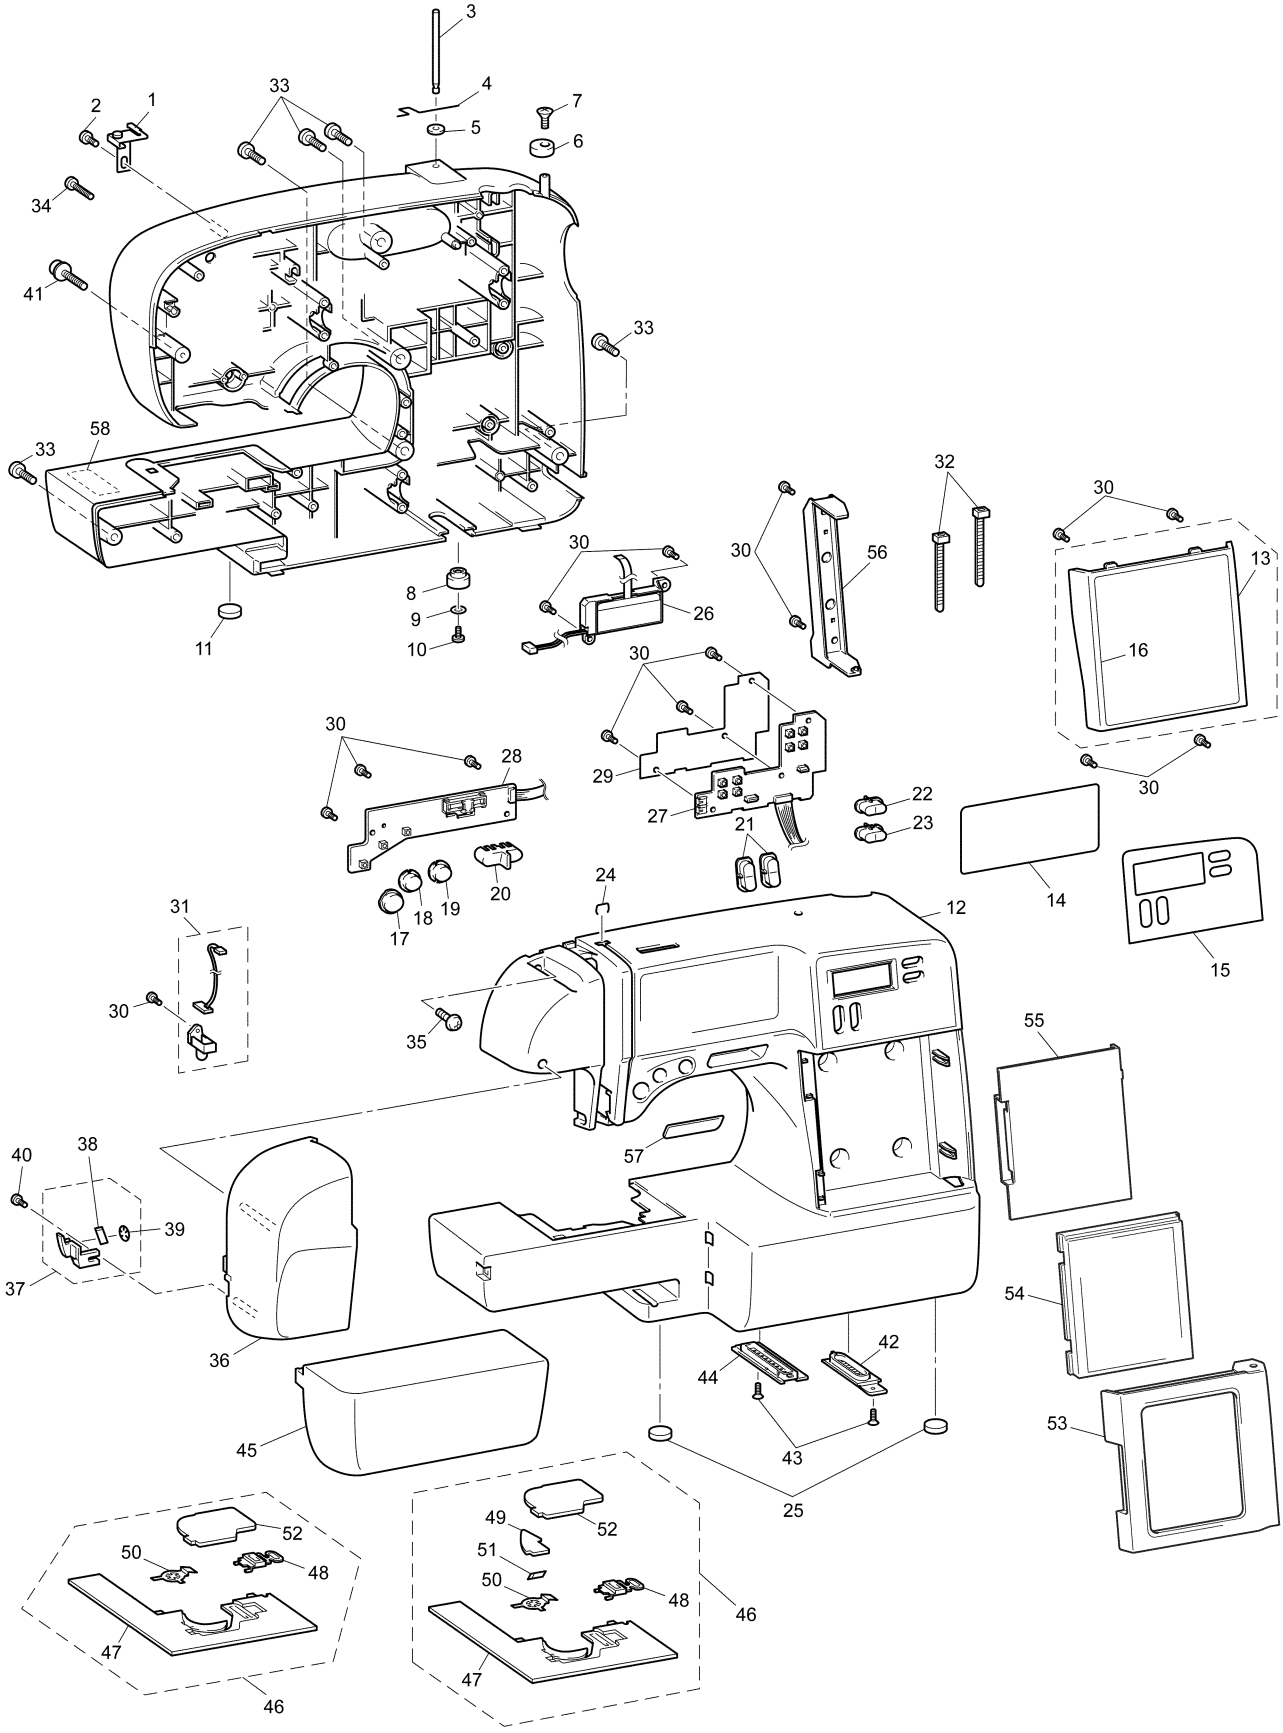

(1) MAIN FRAME / COVER

No.	CODE	NAME	REMARKS
52	XD1645021	NEEDLE PLATE COVER SUPPLY ASSY	
53	XE3509001	PHOTO FRAME COVER (MS4, 5, 6, MS4NT, MS6NT)	1000010193
54	XE5690001	CARD HOLDER ASSY (MS4, 5, 6, MS4NT, MS6NT)	1000010193
55	XE5717001	PANEL BASE (MS6, MS6NT)	1000010193
	XE5693001	PANEL BASE (MS4, MS4NT)	1000010191
	XE5711001	PANEL BASE (MS5)	1000010191
56	XE3515001	HINGE PLATE (MS4, 5, 6, MS4NT, MS6NT)	1000010193
57	XE5461001	SV COVER (MS4, 5, SM340E, MS4NT)	1000010191
58	XE3360001	LOWER THREAD GUIDE LABEL	1000015275

(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT

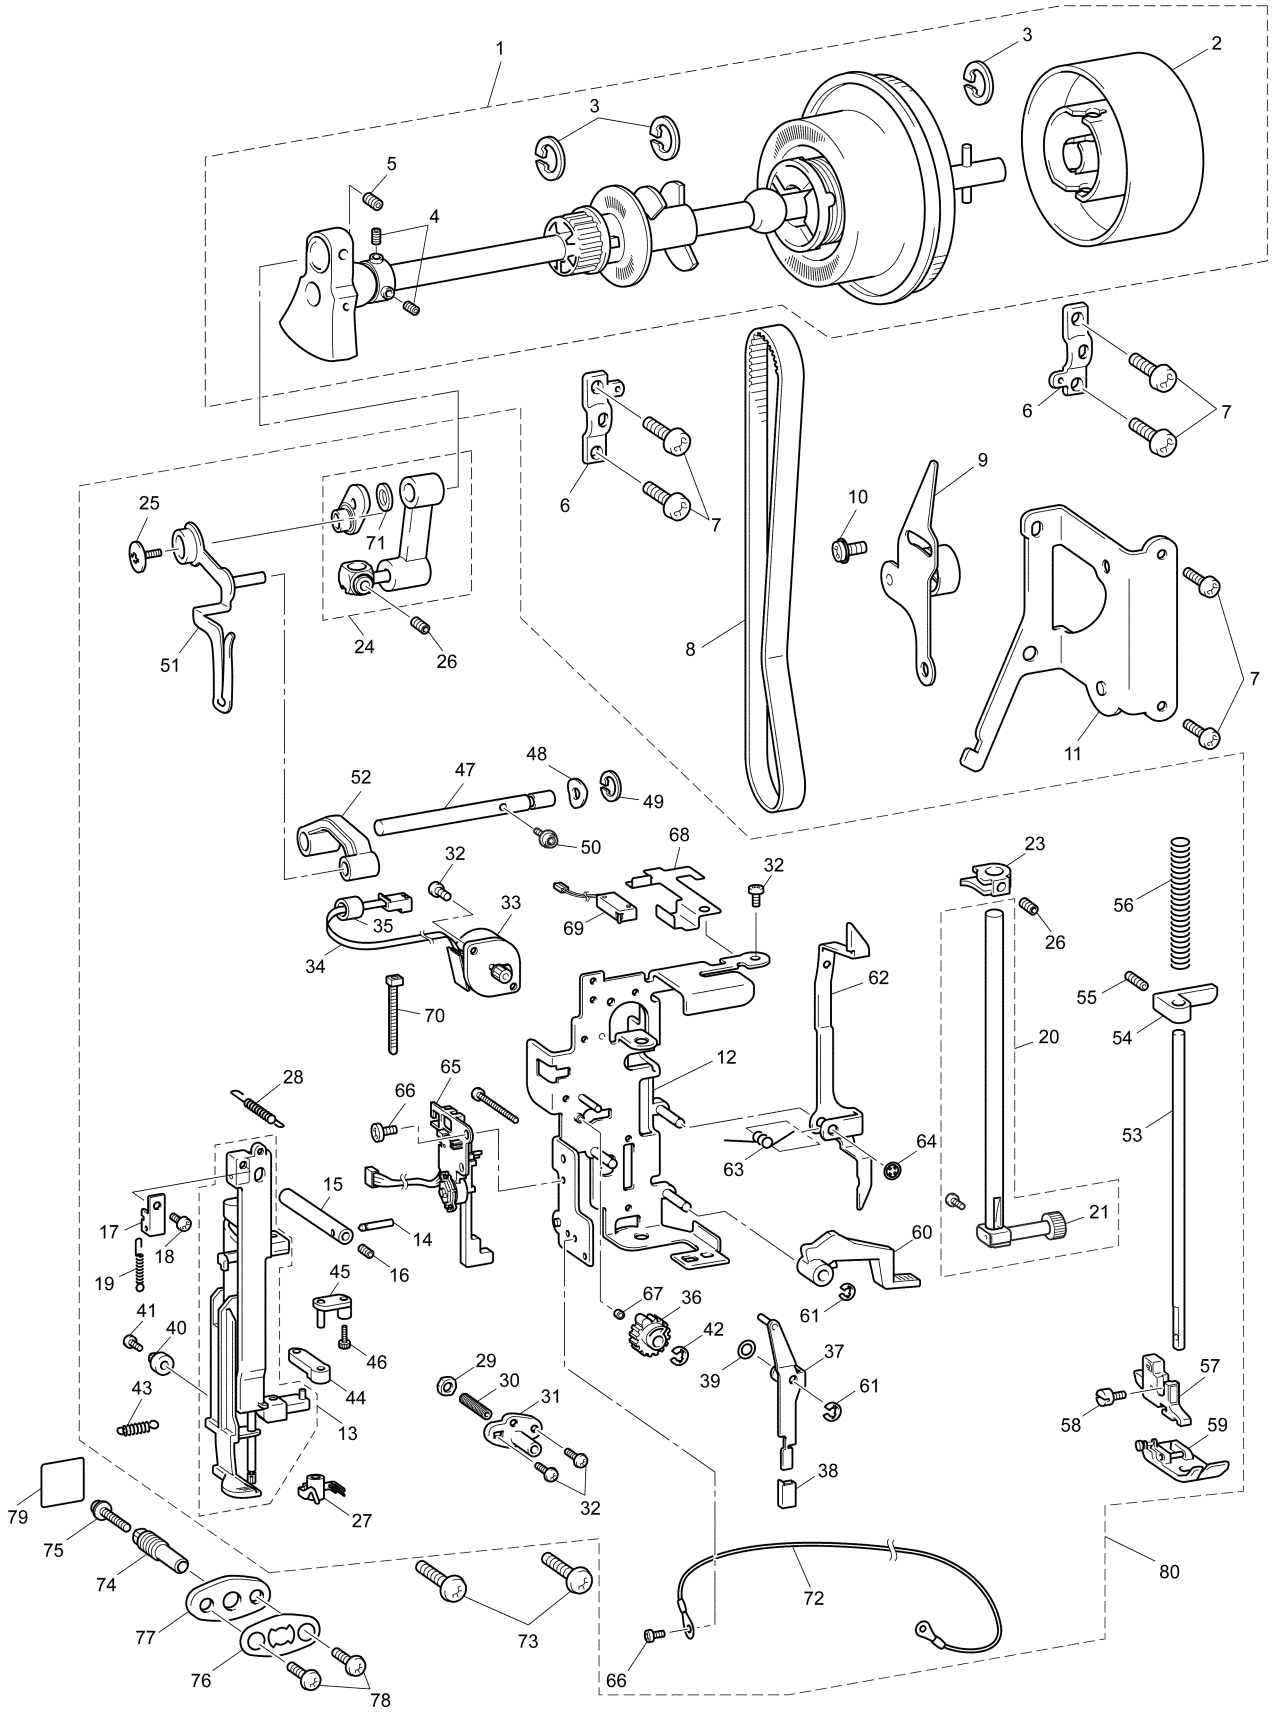

(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT

No.	CODE	NAME	REMARKS
		UPPER SHAFT MECHANISM	
1	XE3703001	UPPER SHAFT SUPPLY ASSY	
2	XC3529021	PULLEY	
3	048060346	RETAINING RING E6	
4	014400432	SET SCREW SOCKET (CP) M4X4	
5	012500532	SET SCREW SOCKET (FT) M5X5	
6	XC3534121	UPPER SHAFT BEARING PRESSER	
7	XC3496021	GIZA TITE 5X16	
8	XC4869021	T BELT 420-5GT-6	
9	XC4870021	TENSION PULLEY ASSY	
10	0A4400806	SCREW PAN (S/P WASHER) M4X8	
11	XC8739020	TENSION PULLEY HOLDER	
		NEEDLE BAR / PRESSER FOOT UNIT	
12	XC8741121	BASE HOLDER ASSY	
13	XE8695001	NEEDLE BAR SUPPORTER ASSY (HS2000, SM360E, SM340E, MS4NT, MS6NT, JS40E, JS60E)	1000019598
	XC8749221	NEEDLE HOLDER SUB ASSY (MS4, 5, 6)	
14	XC2420020	SHAFT	
15	XC8754021	NEEDLE HOLDER SHAFT A	
16	014300532	SET SCREW SOCKET (CP) M3X5	
17	XC8755020	PLATE	
18	060300516	SCREW BIND M3X5	
19	X50476021	SPRING (HS2000, SM360E, SM340E, MS4NT, MS6NT, JS40E, JS60E)	
20	XE3825001	NEEDLE BAR ASSY N	
21	XE3827001	NEEDLE CLAMP SCREW	
~~22~~	~~X58913021~~	~~BIND 2X3~~	DEL
23	XC2434021	NEEDLE THREAD BLOCK (HS2000, SM360E, SM340E, MS4NT, MS6NT, JS40E, JS60E)	
24	XC6562131	NEEDLE BAR CRANK ROD ASSY	
25	132051022	SCREW, FLAT SM3.57-40X7 L	
26	012400432	SET SCREW SOCKET (FT) M4X4	
27	XA1854051	THREADER HOOK ASSEMBLY	
28	XC2429021	SPRING	
29	X56851021	LOCK NUT	
30	014401232	SET SCREW SOCKET (CP) M4X12	
31	XC8756021	SHAFT BUSHING	
32	060300616	SCREW BIND M3X6	
33	XC8757021	Z PULSE MOTOR: M35SP-9N	
34	XC8759021	LEAD WIRE ASSY, ZPM-LE	
35	XC5409021	FERRITE CORE: FSRB140140RNB00T	
36	XC8760020	Z ZIGZAG CAM	
37	XC8761121	Z ZIGZAG LEVER ASSY	

No.	CODE	NAME	REMARKS
38	XC8764020	Z LEVER CAP	
39	137713020	POLYESTER SLIDER	
40	XC2435020	ZIGZAG ADJUSTING NUT	
41	018301032	BOLT SOCKET M3X10	
42	048030346	RETAINING RING E3	
43	XC2748021	SPRING-Z	
44	XC2436021	NEEDLE HOLDER BLOCK	
45	XC2437021	SHAFT ASSY	
46	XC3037021	SCREW3X10	
47	XC8765121	SHAFT	
48	XZ5030001	WASHER, SPRING	
49	048050346	RETAINING RING E5	
50	XC3338021	SCREW 3X8	1000008500
51	XC8564031	THREAD TAKE-UP LEVER	
52	XC4897020	THREAD TAKE-UP LEVER LINK	
53	XC4898021	PRESSER BAR	
54	XC4899121	PRESSER BAR CLAMP	
55	XC7207021	SCREW STUD M5	
56	XC4900021	SPRING	
57	XE2555101	PRESSER FEED HOLDER ASSY	1000022487
58	132730122	TIGHTENING SCREW 3.57	
59	XC3021031	Z FOOT	
60	XC4902021	PRESSER FOOT LIFTER	
61	048040346	RETAINING RING E4	
62	XC8766020	THREAD RELEASE LEVER	
63	XC4904121	SPRING	
64	146200021	RETAINING RING, CS4	
65	XC8767021	BH SWITCH ASSY	
66	0A4400806	SCREW PAN (S/P WASHER) M4X8	
67	XC8773020	RUBBER	
68	XC8774021	PRESSER SWITCH HOLDER	
69	XC8775021	PF SWITCH ASSY, LE	
70	X53169020	BAND	
71	X53330020	WASHER	
72	XE3856001	LEAD WIRE ASSY: GROUND	
73	XC4961021	GIZA TITE 5X20	
74	XC4905121	ADJUSTING SCREW	
75	060302506	SCREW BIND M3X25	
76	XC6056120	PLATE SPRING	
77	XC4906020	ADJUSTING PLATE	
78	085411015	TAPTITE BIND B M4X10	
79	XC4907021	LABEL	
80	XE6416101	NEEDLE UNIT SUPPLY ASSY CP3 (OTHER)	1000019598
	XE5741101	NEEDLE UNIT SUPPLY ASSY (MS4, 5, 6)	1000018815

(3) FEED UNIT

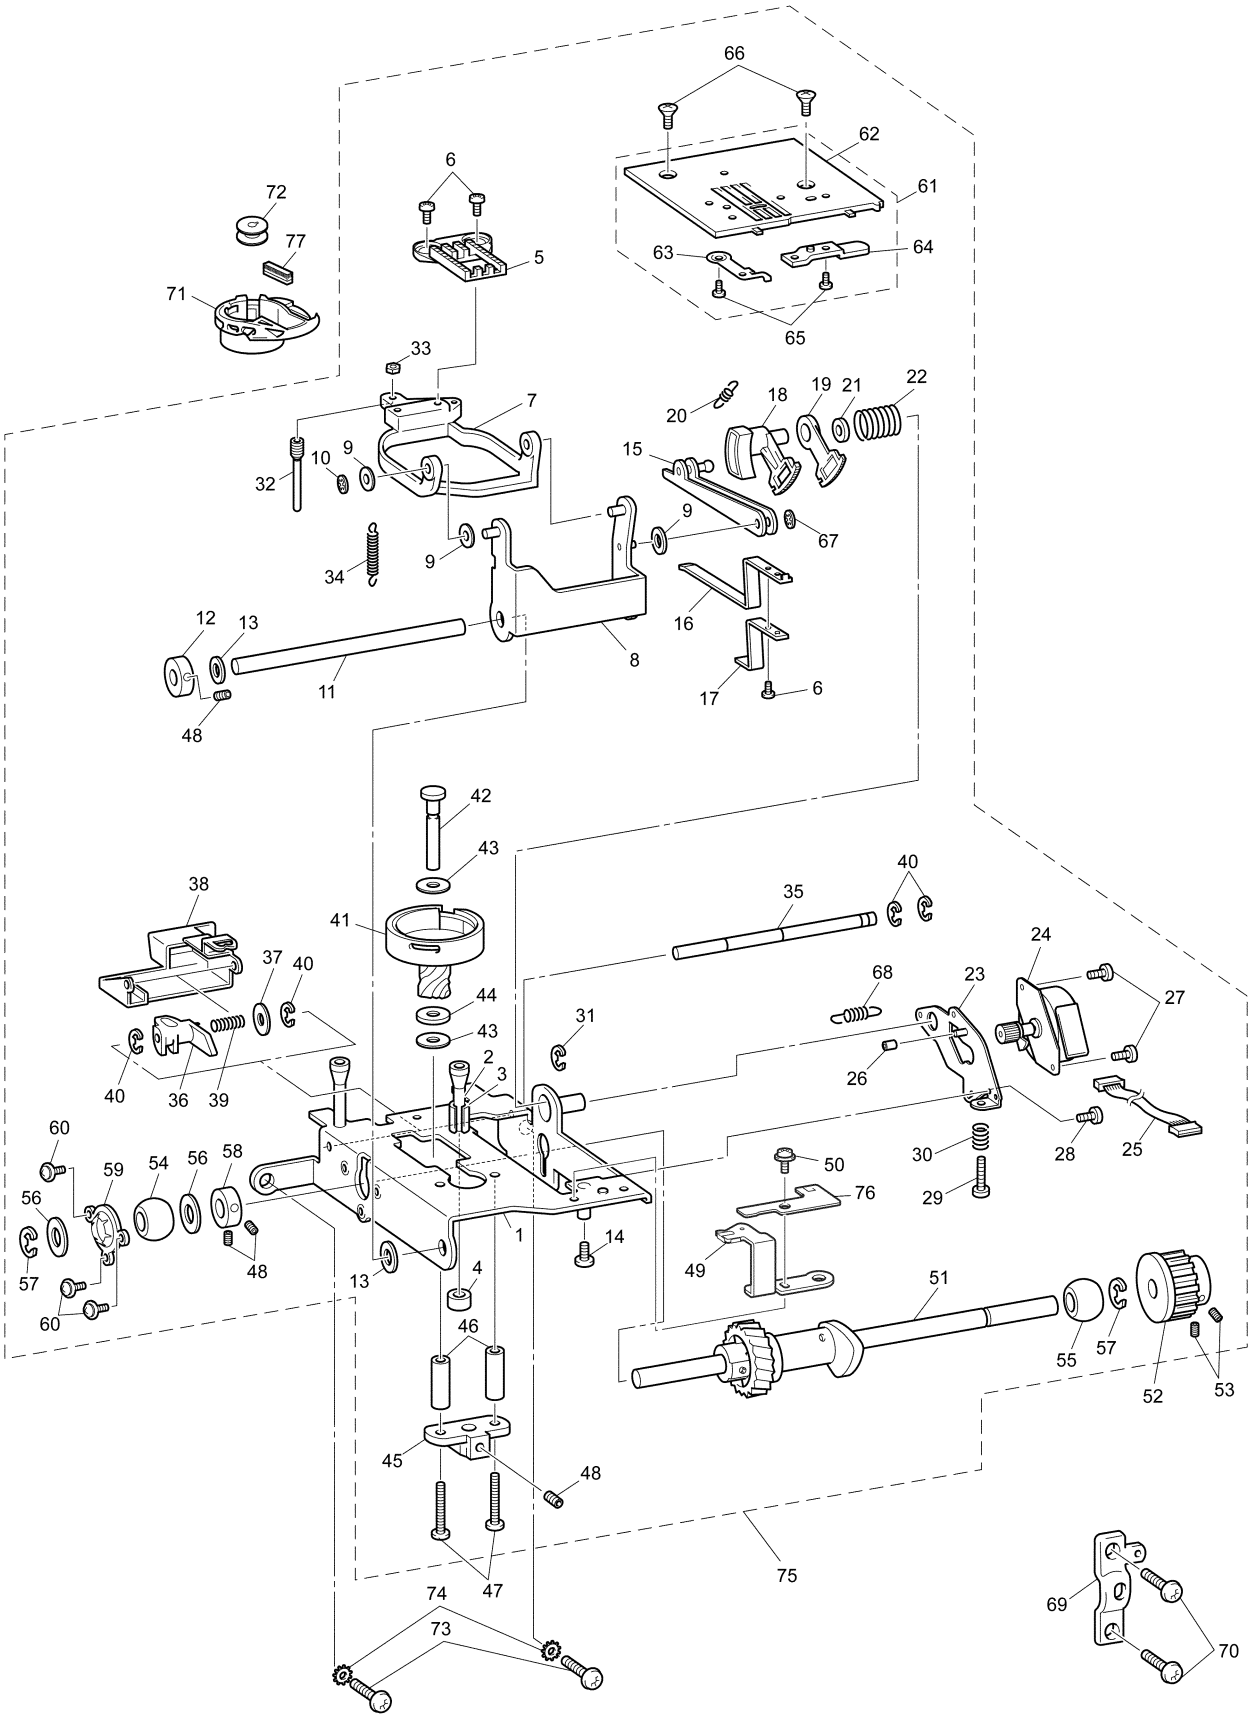
66
62
61
6
72
77
5
71
63
64
65
33
7
20
18
19
21
22
10
9
32
15
9
67
34
9
16
12
13
11
8
17
6
48
42
43
38
41
35
40
37
40
44
43
31
24
68
23
27
40
36
39
2
3
26
28
25
60
59
54
56
58
30
50
56
76
29
57
48
1
14
49
60
13
4
51
46
55
57
52
53
45
48
75
74
47
73
69
70

(3) FEED UNIT

No.	CODE	NAME	REMARKS
		FEED UNIT	
1	XC8778221	BASE PLATE ASSY	1000016418
2	XC8782021	NEEDLE PLATE SUPPORTER SHAFT B	
3	XC8783020	FEED ARM SUPPORTER	
4	021300106	NUT 1 M3	
5	XC5467131	FEED DOG	
6	060300616	SCREW BIND M3X6	
7	XC8785021	FEED BAR	
8	XC8786121	FEED ARM A ASSY	
9	137999020	POLYESTER SLIDER	
10	146200021	RETAINING RING, CS4	
11	XC8789021	HORIZONTAL FEED SHAFT	
12	130676121	SET SCREW COLLAR	
13	X50546020	WASHER, THRUST	
14	060301206	SCREW BIND M3X12	
15	XC4924021	FEED ARM ASSY	
16	XC4927021	FEED SUPPORTING PLATE	
17	XC4928120	FEED SUPPORTING PLATE B	
18	XC2527121	FEED ADJUSTER	
19	XC2529020	F GEAR	
20	XC2530021	SPRING	
21	137713020	POLYESTER SLIDER	
22	XC2531021	SPRING	
23	XC8791021	FPM HOLDER SUB ASSY	
24	XC8757021	Z PULSE MOTOR: M35SP-9N	
25	XC8793021	LEAD WIRE ASSY, FPM-LE	
26	XC8773020	RUBBER	
27	060300416	SCREW BIND M3X4	
28	XC3338021	SCREW3X8	
29	018402533	BOLT SOCKET M4X25	
30	XC2537021	SPRING	
31	XC9924021	RETAINING RING 10	
32	XC3941021	VERTICAL ADJUSTER SCREW ASSY	
33	XC2546021	M5 NUT	
34	XC4935021	SPRING	
35	XC8794021	VERTICAL FEED SHAFT	
36	XC2551020	VERTICAL LEVER	
37	025040332	WASHER PLAIN L 4	
38	XC8795121	DROP KNOB	1000007782
39	XC2550021	SPRING	
40	048030346	RETAINING RING E3	
41	XD0115021	OUTER ROTARY HOOK ASSY	
42	XD1943021	OUTER ROTARY HOOK SHAFT	
43	137805022	SPACER	
44	137976021	WASHER 6	
45	XC4937020	SHAFT SUPPORTER	
46	XC4938020	COLLAR	
47	XC6551021	SCREW, PAN (S/P WASHER) M4X22	
48	014400432	SET SCREW SOCKET (CP) M4X4	
49	XE7558001	INNER ROTARY HOOK BRACKET ASSY	1000016400
50	0A5300806	SCREW PAN (S/P WASHER) M3X8	1000015250
51	XC8796021	LOWER SHAFT ASSY	
52	XC4943021	TIMING PULLEY D	
53	014500532	SET SCREW SOCKET (CP) M5X5	
54	X52664020	LOWER SHAFT BUSHING	
55	XC3792020	UPPER SHAFT BUSHING	
56	X51383020	WASHER, THRUST	
57	048060346	RETAINING RING E6	
58	XC8798021	SET COLLAR	
59	XC4944021	BUSHING PRESSER B	
60	085310615	TAPTITE BIND B M3X6	
61	XC8565231	NEEDLE PLATE A ASSY	1000018284
62	XC8566031	NEEDLE PLATE A	
63	XE8145001	STOPPER PLATE	1000017313
64	XE8544001	F GEAR STOPPER PLATE	1000018284
65	060260316	SCREW BIND M2.6X3	
66	X50487021	SCREW M4	1000010447
67	X56655021	RETAINING RING: CSTW-3.5	
68	XC6364021	SPRING	
69	XC3534121	UPPER SHAFT BEARING PRESSER	
70	XC3496021	GIZA TITE 5X16	
71	XE7560001	INNER ROTARY HOOK ASSY	1000016400
72	X52800120	BOBBIN	
73	XC3805021	GIZA TITE 5X16	
74	XZ5053001	WASHER EX TOOTH 5	
75	XE4812401	FEED UNIT SUPPLY ASSY CP3	1000018284
76	XE7323101	IRH BRACKET SUPPORT PLATE	1000016146
77	XC3137000	PILE	1000019975

(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM

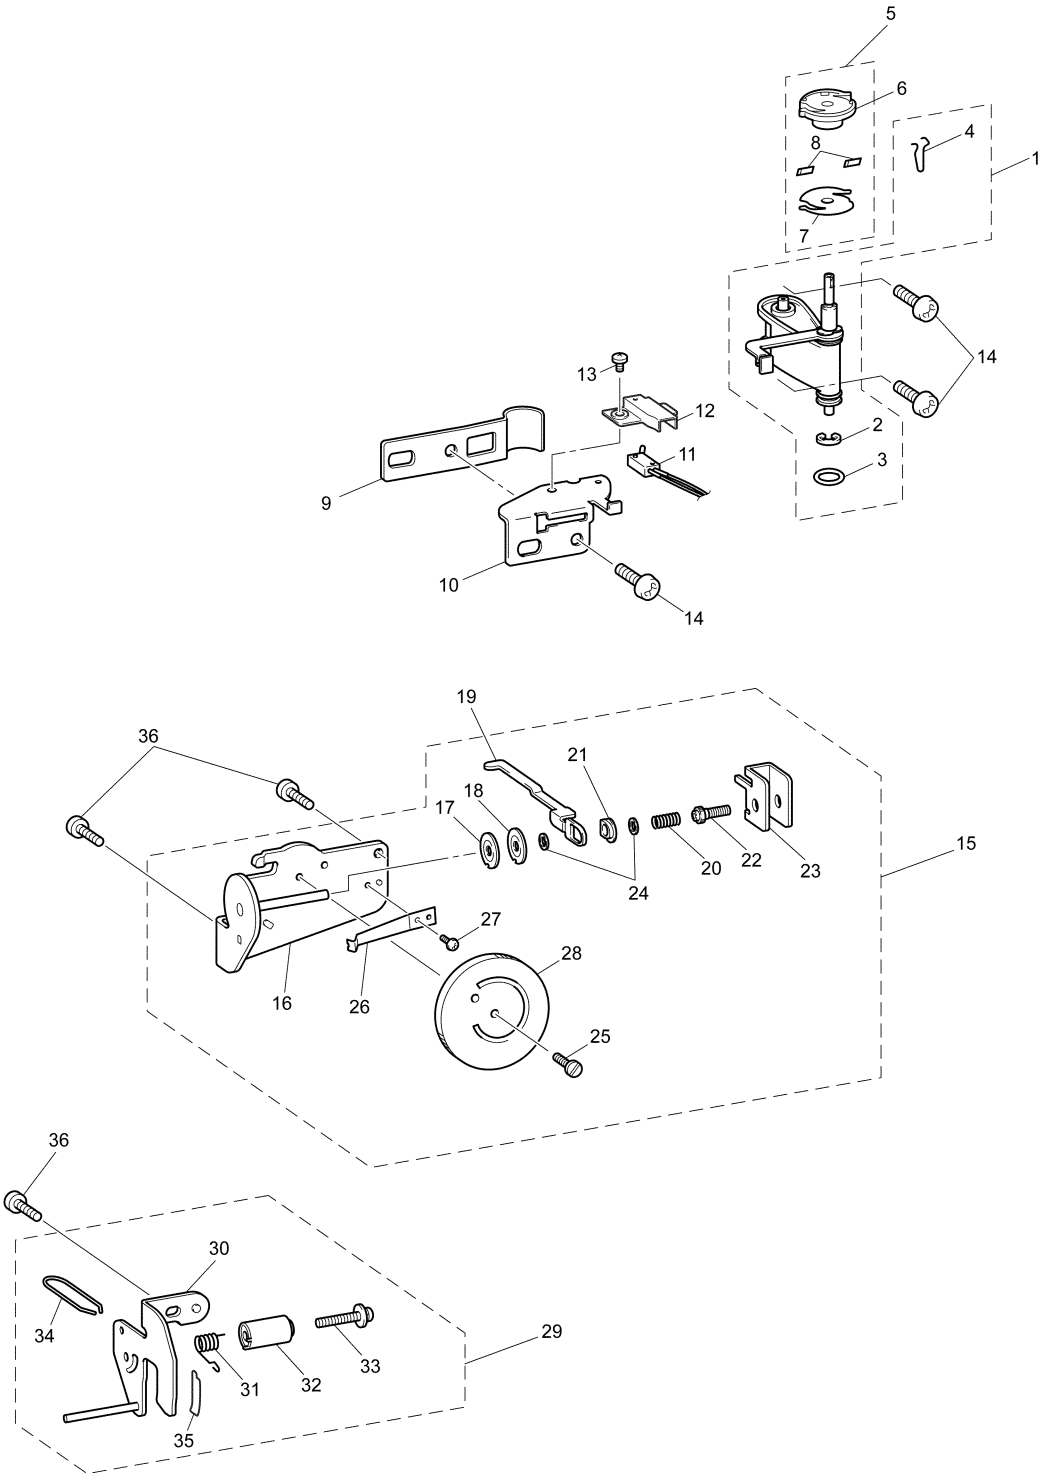

(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM

No.	CODE	NAME	REMARKS
		BOBIN WINDING MECHANISM	
1	XE6186001	BOBBIN WINDER ASSY	1000019786
2	048050346	RETAINING RING E5	
3	X55238021	RUBBER RING	
4	XZ5039001	BOBBIN WINDER SHAFT SPRING	1000007742
5	XC9116021	BOBBIN BASE ASSY	
6	XC4078121	BOBBIN BASE (OTHER)	
	XC8803021	BOBBIN BASE (MS4, 5, 6, SM340E, MS4NT, MS6NT, JS40E)	1000010193
7	XA5877021	BOBBIN THREAD CUTTER HOLDER	
8	X80321021	NT LOWER THREAD CUTTER	
9	XC8804020	BOBBIN WINDER SPRING	
10	XC8805121	BOBBIN WINDER SHAFT STOPPER	1000012795
11	XC2612051	SW ASSY: BW-F	1000019786
12	XE6076001	SENSER HOLDER	1000019786
13	060300516	SCREW BIND M3X5	1000019786
14	XC3496021	GIZA TITE 5X16	

No.	CODE	NAME	REMARKS
		NEEDLE THREADING MECHANISM	
15	XE5754101	THREAD GUIDE A ASSY	1000018407
16	XC5048121	THREAD TENSION HOLDER ASSY	1000018407
17	XA0083121	TENSION DISC A	
18	XA0084121	TENSION DISC B	
19	XC8828020	THREAD RELEASE PLATE	
20	X55842021	SPRING	
21	137881021	TENSION DISC WASHER	
22	XC5053021	THREAD TENSION ADJUSTING SCREW	
23	XC5054021	THREAD TENSION PLATE	
24	XD0573021	WASHER	
25	XC9234021	TENSION DIAL SHAFT	
26	X56839021	NOTCHED SPRING	
27	062300416	SCREW, PAN M3X4	
28	XE5650001	THREAD TENSION DIAL	1000010411
29	XE2780101	THREAD GUIDE ASSY B	
30	XC5060121	THREAD TAKE-UP HOLDER B	
31	XC6957121	THREAD TAKE UP SPRING	
32	XC2648121	THREAD CATCHING SPRING CASE	
33	0A4301806	SCREW, PAN (S/P WASHE) M3X18	
34	XC5059020	THREAD GUIDE WIRE	
35	XE5984001	SPRING TAPE	1000011631
36	085411416	TAPTITE, BIND B M4X14	

(5) ELECTRIC PARTS / MAIN MOTOR UNIT

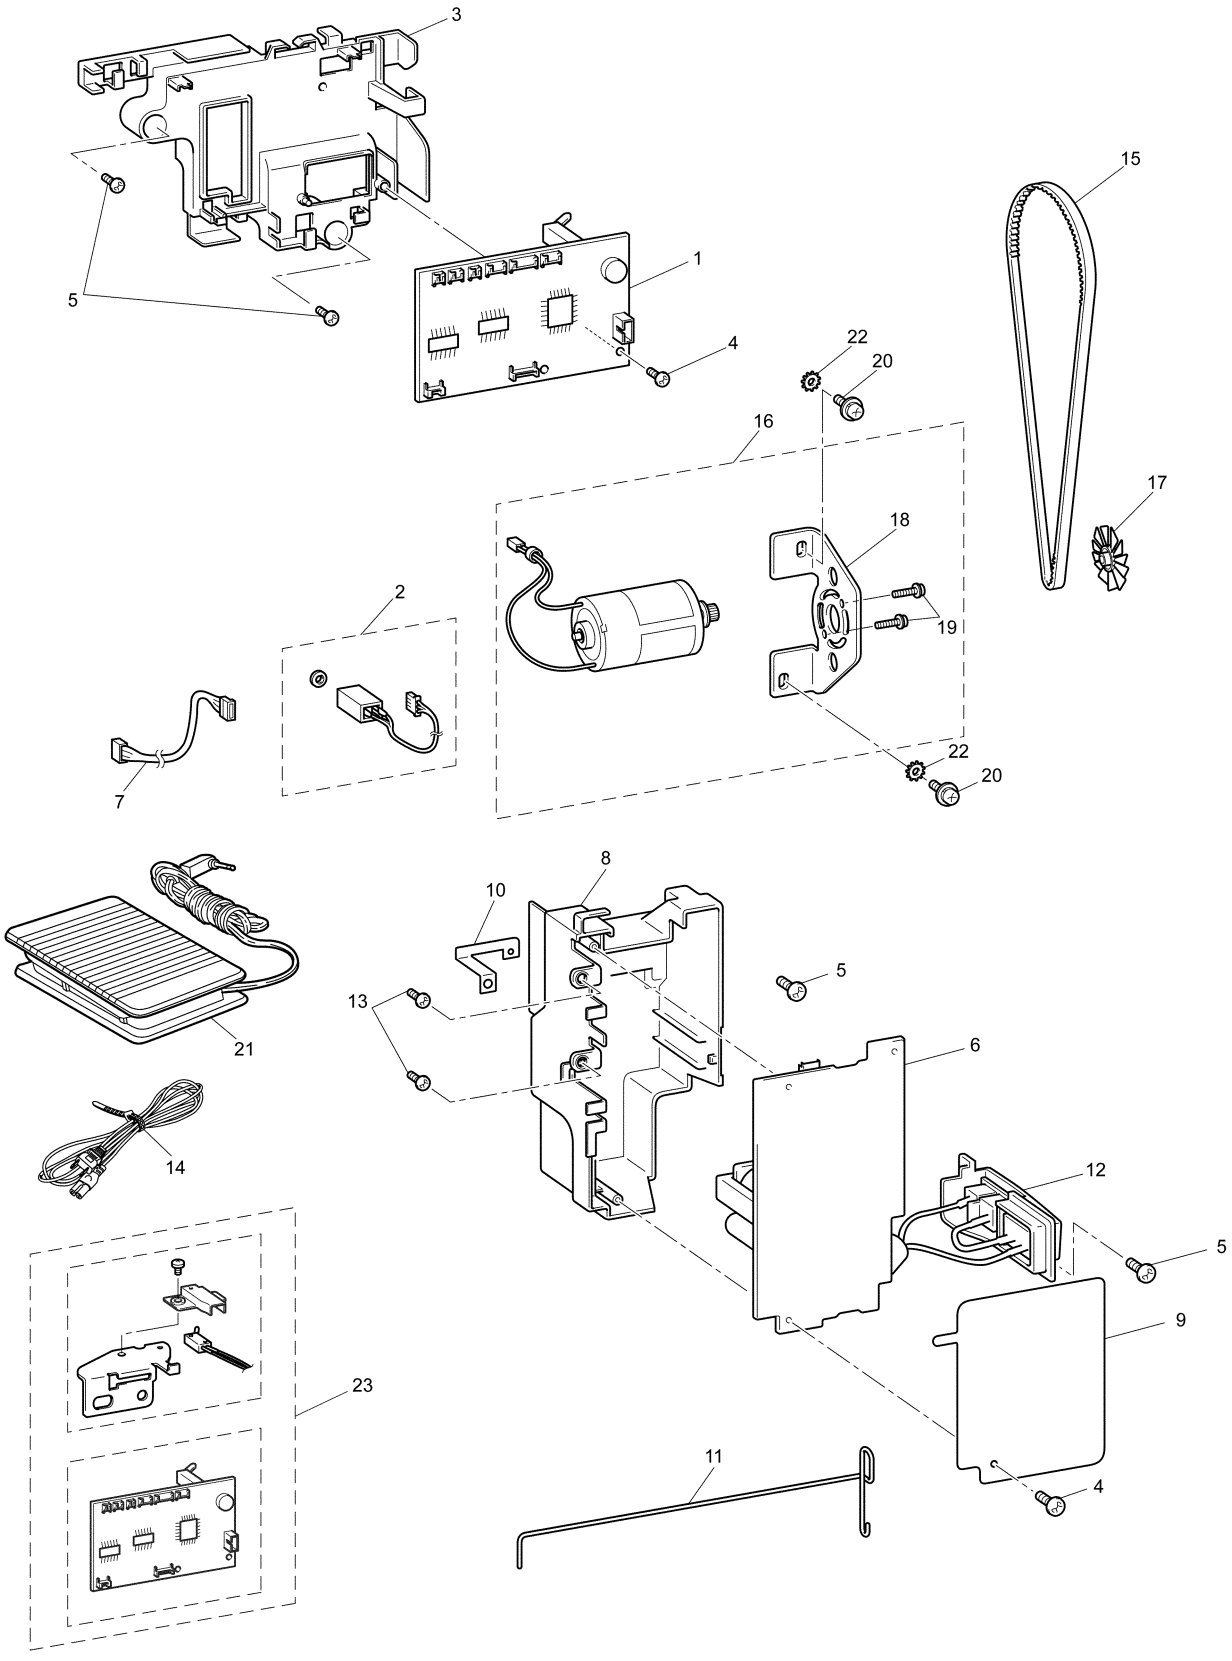

(5) ELECTRIC PARTS / MAIN MOTOR UNIT

No.	CODE	NAME	REMARKS
		ELECTRIC PARTS	
1	XE8621001	MAIN PCB SUPPLY ASSY-70 (F0G******~) (HS2000)	1000019786
	XE8617001	MAIN PCB SUPPLY ASSY-60 (F0G******~) (SM360E, MS6, MS6NT, JS60E)	1000019786
	XE8615001	MAIN PCB SUPPLY ASSY-50 (F0G******~) (MS5, MS5NT)	1000019786
	XE8614001	MAIN PCB SUPPLY ASSY-40 (F0G******~) (SM340E, MS4, MS4NT, JS40E)	1000019786
2	XC9830021	FC JACK SUPPLY ASSY-120 (120V)	
	XC9832021	FC JACK SUPPLY ASSY-230 (230V)	
3	XC8809121	SHUTTER COVER	1000013404
4	085311015	TAPTITE BIND B M3X10	
5	087411416	TAPTITE CUP B M4X14	
6	XC9831021	POWER PCB SUPPLY ASSY-120 (120V)	
	XC9833021	POWER PCB SUPPLY ASSY-230 (230V)	
7	XC8824021	LEAD WIRE ASSY, POWER-LE	
8	XC8825021	INSULATION COVER	
9	XC8826021	INSULATOR SHEET	
10	XC8827020	POWER PLATE SPRING	
11	XE3728001	SPRING	
12	XC8829021	INLET ASSY, LE120	
	XC8940121	INLET ASSY, LE230 (MS4, 5, 6, SM360E, JS40E, JS60E)	
13	060400816	SCREW BIND M4X8	
14	XC6052021	POWER SUPPLY CORD: UL CSA-LF	
	XA0070121	POWER SUPPLY CORD (MS4, 5, 6, MS4NT, MS6NT, SM340E, SM360E, JS40E, JS60E)	1000010193
	X59354121	POWER SUPPLY CORD -BS (MS4, 5, 6: UK)	1000010431
23	XE8637001	MAIN PCB SUPPLY SET-70 (~E0G******) (HS2000)	1000019786
	XE8636001	MAIN PCB SUPPLY SET-60 (~E0G******) (SM360E, MS6, MS6NT, JS60E)	1000019786
	XE8635001	MAIN PCB SUPPLY SET-50 (~E0G******) (MS5, MS5NT)	1000019786
	XE8634001	MAIN PCB SUPPLY SET-40 (~E0G******) (SM340E, MS4, MS4NT, JS40E)	1000019786

No.	CODE	NAME	REMARKS
		MAIN MOTOR UNIT	
15	XC3806121	TIMING BELT 372-2GT-6	
16	XD1827021	MAIN MOTOR SUPPLY ASSY	
17	XC3803020	MOTOR FAN	
18	XC8815021	MOTOR HOLDER	
19	0A5300806	SCREW PAN (S/P WASHER) M3X8	
20	XC3805021	GIZA TITE 5X16	
21	XC8816021	FOOT CONTROLLER: FC-322-81-LF (OTHER)	
	XD0501021	FOOT CONTROLLER: FC-322-LF-EU (MS4, 5, 6, MS4NT, MS6NT)	1000010193
22	XZ5053001	WASHER EX TOOTH 5	

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

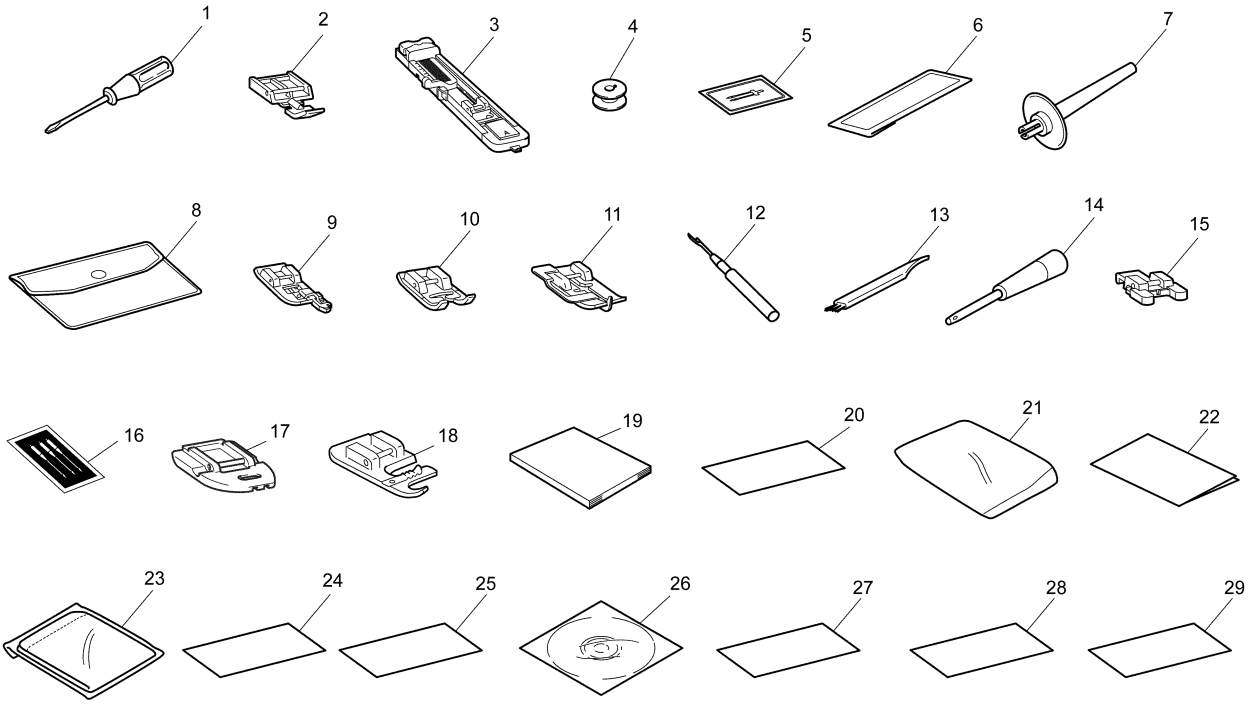

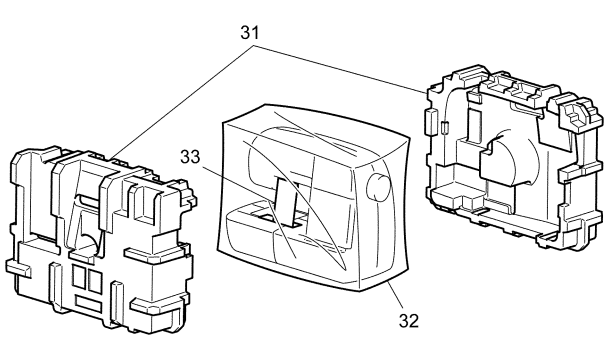

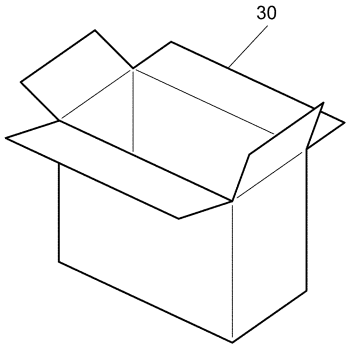

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

No.	CODE	NAME	REMARKS
		ACCESSORY PARTS	
1	XC8349021	SCREW DRIVER	
2	X59370021	ZIPPER FOOT	
3	XC2691033	BH PRESSER FOOT ASSY	
4	X52800120	BOBBIN	
5	131096121	NEEDLE SET (1 PCE)	
6	XC8834021	NEEDLE SET	
7	130920021	EXTRA SPOOL PIN	
8	XC4487021	ACCESSORY BAG	
9	XE6305101	OVERCASTING STITCH FOOT ASSY	1000017761
10	XD0810031	TRANSPARENCY PRESSER FOOT	
11	XC4051031	BLIND STITCH FOOT ASSY	
12	XZ5082001	SEAM RIPPER	1000020345
13	X59476021	CLEANING BRUSH	
14	XZ5051001	PUNCH (EXCEPT: MS4, 5, MS4NT, SM340E, JS40E)	
15	XE2137001	BUTTON SEWING FOOT	
16	XD0360021	NEEDLE SET G	
17	122324001	ZIPPER FOOT (OTHER)	
	X59370021	ZIPPER FOOT (MS4, 5, 6, MS4NT, MS6NT)	1000010429
18	XE0741001	CORDING FOOT ASSY (HS2000)	
		USER MANUAL / OTHER PARTS	
19	XE3669101	INSTRUCTION BOOK ENG	1000010868
	XE3724001	INSTRUCTION BOOK SPA	
	XE5494101	INSTRUCTION BOOK RUS	1000009607
	XE5696001	INSTRUCTION BOOK GER	1000010193
	XE5765001	INSTRUCTION BOOK FRE	1000019282
	XE5766001	INSTRUCTION BOOK DUT	1000019481
	XE5891001	INSTRUCTION BOOK ITA	1000019282
	XE6626001	INSTRUCTION BOOK SWE/FIN	1000013982
	XE6627001	INSTRUCTION BOOK DAN/NOR	1000013982
20	XC0380021	WARRANTY CARD	
	~~XE5572001~~	~~WARRANTY CARD BROTHER RUS~~	1000017863
	~~UH385100~~	~~WARRANTY CARD EUR~~	
	~~XC6402021~~	~~WARRANTY CARD UK~~	1000017863
	~~XE5609101~~	~~WARRANTY CARD 5YEARS ITA~~	1000017863
	~~LA1661001~~	~~WARRANTY CARD EURO CH~~	1000017863
21	130800021	BAG 230X310H	
22	XE3725101	QUICK REFERENCE GUIDE (OTHER)	1000011321
	XC8837121	QUICK REFERENCE GUIDE (SM340E, JS40E, MS4NT, MS5NT, MS6NT)	1000017831
	XC9344121	QUICK REFERENCE GUIDE (MS4, MS5, MS6)	

No.	CODE	NAME	REMARKS
23	XC8973021	DUST COVER ASSY (OTHER)	1000013793
	XA2112022	DUST COVER ASSY (SM340E: RUS, MS4, MS5, MS6, MS4NT, MS6NT, JS40E)	1000013793
24	XD0120021	CAUTION SHEET S33	
25	XD1889021	INSERTION SHEET FOR NEEDLE	
	XE4987001	INSERTION SHEET (OTHER)	1000010193
	XE5699001	INSERTION SHEET (MS4, 5, 6, MS4NT, MS6NT)	1000010193
26	XE5705101	INSTRUCTION DVD ASSY (MS4, 5, 6, MS4NT, MS6NT)	1000010193
	XE5495101	INSTRUCTION DVD ASSY RUS	1000017997
	XE6308001	INNOV-IS RANGE PROMOTION DVD	1000009607
	XE5704001	PHOTO CARD (MS4, 5, 6, MS4NT, MS6NT)	1000010193
	XE5700001	PANEL SHEET ASSY (MS4, 5, 6, MS4NT, MS6NT)	1000010193
	XE5702001	TEMPLATE ASSY (MS4, 5, 6, MS4NT, MS6NT)	1000010193
	XE1158101	BOOKLET (MS4, 5, 6, MS4NT, MS6NT)	1000010193
27	XE5892001	STITCH LIST CARD (MS4: GER, UK, FRA, ITA, NEU, MS4NT)	1000011359
	XE5893001	STITCH LIST CARD (MS5: GER, UK, FRA, ITA)	1000011359
	XE5894001	STITCH LIST CARD (MS6: GER, UK, FRA, ITA, MS6NT)	1000011359
28	XE8541001	INSERTION (for INNER ROTARY HOOK & INNER ROTARY HOOK BRACKET: EXCEPT: USA)	1000018357
	XE8340001	INSERTION (for INNER ROTARY HOOK & INNER ROTARY HOOK BRACKET: USA)	1000018358
	XE8862201	INSERTION CE (UK, ITA, GUF, FRA, ESP, FIN, CHE, EEU, NEU, DEU, AUT)	1000021837
29	XD0256121	INSERTION WEEE (MS4, MS5, MS6, MS4NT, MS6NT)	1000013793
	~~XE2895001~~	~~OPTIONAL 5YEAR WARRANTY CARD (MS4, 5, 6: UK)~~	1000017863
	~~XE5611001~~	~~REGISTRATION CARD ITA~~	1000017863

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

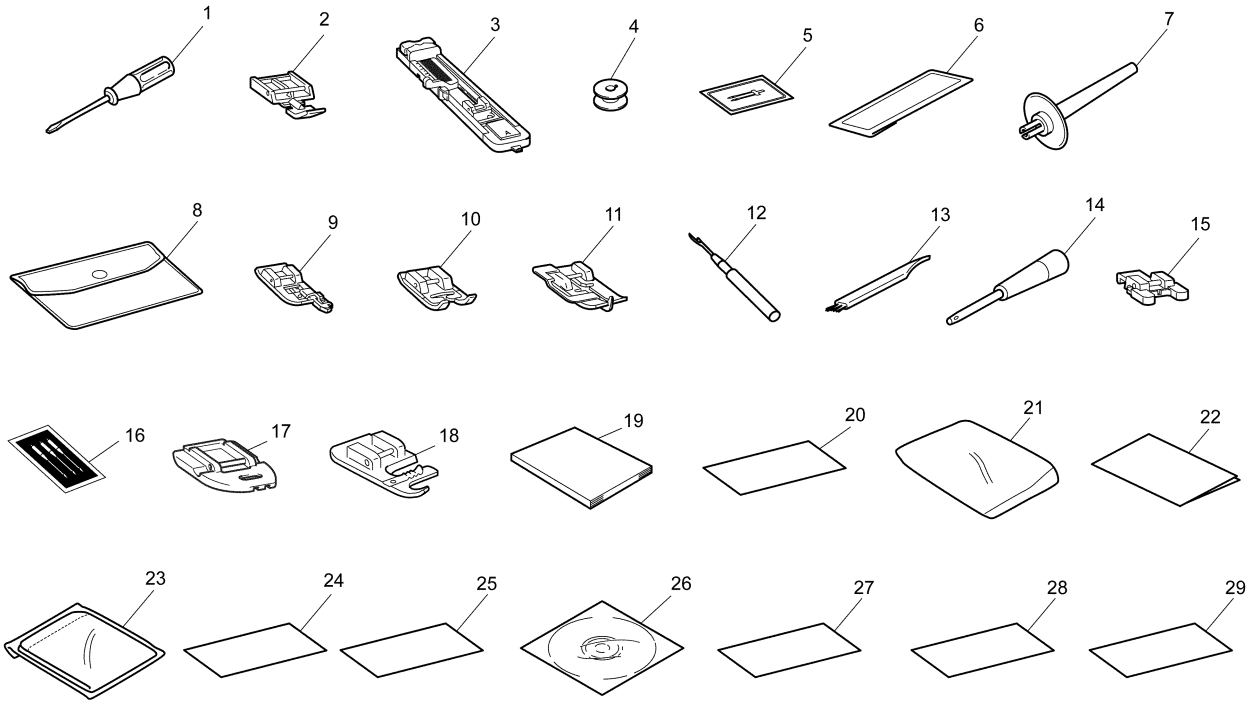

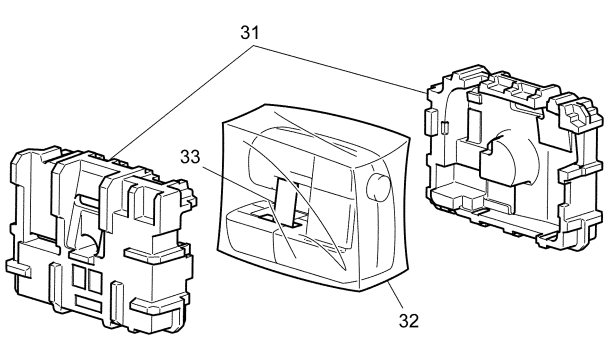

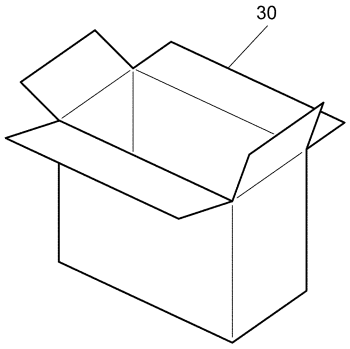

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

No.	CODE	NAME	REMARKS
		PACKAGE	
30	XE3670001	CARTON (HS2000)	
	XE5498001	CARTON (SM360E)	1000009607
	XE5719001	CARTON (MS6)	1000010193
	XE5707001	CARTON (MS4)	1000010191
	XE5497001	CARTON (SM340E)	1000009694
	XE5713001	CARTON (MS5)	1000010191
	XE8687001	COLOR CARTON MODEL: MS-4NT (MS4NT)	1000019445
	XE8689001	COLOR CARTON MODEL: MS-6NT (MS6NT)	1000019445
	XE8688001	COLOR CARTON MODEL: MS-5NT (MS5NT)	1000019445
	XE7785001	COLOR CARTON MODEL: JS-40E (JS40E)	1000016962
	XE7786001	COLOR CARTON MODEL: JS-60E (JS60E)	1000016964
31	XE3591001	S38 PS FOAM ASSY	
32	X60439121	BAG 630X630T	1000013217
33	XE5049001	NEEDLE GUARD D	1000008531
	XD0242021	DVD STICKER (MS4, 5, 6: UK)	1000010431

brother

HS2000/SM360E/SM340E/MS4/MS4NT/MS5/MS5NT/MS6/MS6NT/JS40E/JS60E
03C08HF885S38/S35